





Disclaimer

Your pictures will be taken for publicity purposes and proof of this workshop existing, anyone don't want their picture taken can inform the respective speaker.







INTRODUCTION

Almost every part of the skate can be replaced/maintained for the sole purpose of <u>longevity</u> and <u>performance</u>.









TABLE OF CONTENTS



01

Skate Parts

Know the names of each part of your skate and some facts about them

03

Maintenance

Mainly on the bearings, frame and boots

02

What can be replaced?


_

Where to get supplies?



01

Skate Parts

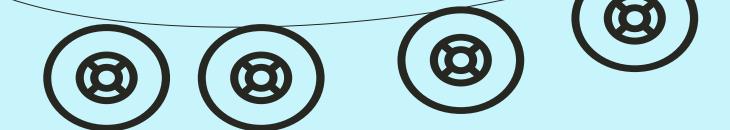



Skate Parts (boot)



Buckle:
Tighten your
buckle so that
your cuff is
secure around
your ankle

Cuff:
Supports the
ankle and shin.
Tighten as much
as possible for
maximum
support




Inner liner: Can be removed to be washed (hard boot skates only)

Laces: holds the plastic boots together so it will not expand over time.

Slide pad: To protect the skate from scratches from the floor etc.




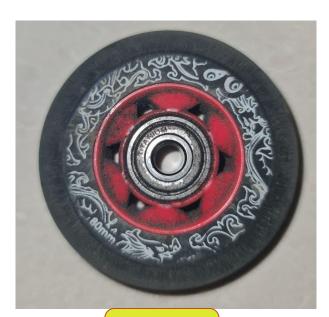

The wheel

Frame axle:

 
Holds the wheels and frame together, if something sounds weird on your skate check this 1st.



Keeps the frame and boots together, if you feel like the skate is not balanced on the center edge you can adjust this.

Skate Parts (wheels)



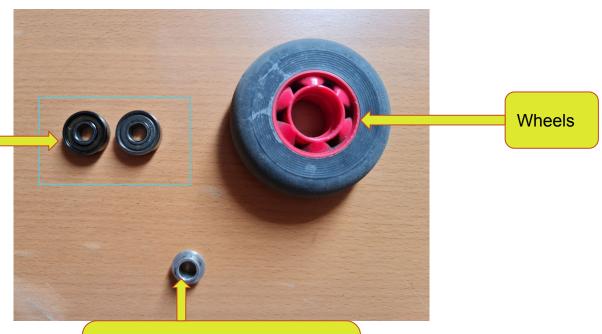

Spacer:

Keeps the axel from putting too much pressure on the bearings



Bearings

Skate Parts (bearings)



Bearing types ABEC 5 - 7 Liq 9 Titanium

Ceramic

Least expensive

Most expensive



Steel face seal, held by c-clip

Pros: hard to dirty, more durable

Cons: harder to remove for servicing



Rubber clip-on seal, held by grooves

Pros: easily removed with a pin to service.

Cons: easier to get damaged and for dirt to enter.

Skate Parts (wheel)



Grove line:

This is the indicator of your wheel core, which is the hard plastic inside your wheels. When the wheel is used until the core it should be changed.


Wheels comes in many sizes and hardness **Sizes:** 72, 74, 76, 80,84, 100, 110 (mm)

Hardness: 60, 78, 80, 85A, 88, 89, 90A (A is shore hardness scale) (softer wheels grip the floor better)

Recommendations (based on experience)

Sliders: 80mm, 90A Salomers: 76mm, 84A Urban: 80 to 84 mm, 84A

Shore Hardness Scale

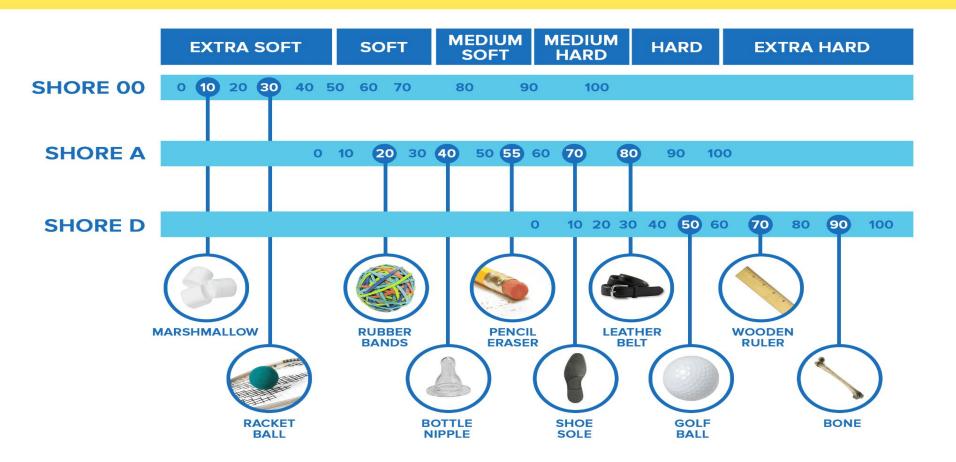

Frames:

Comes in 243, 231, 219 mm (rule of thumb: bigger skate size, bigger frame) (for freestyle skaters)

231mm (EU34-39)

243mm (EU40-47)

243 mm frames can fit 80mm wheels max

231 mm frames can fit 76mm wheels max

219 mm frames can fit 72mm wheels max



Frames can also come in 3 wheels or 4 wheels, benefits of 3 wheels is that you can fit 110mm wheels in a 243 frame.

(Generally bigger wheels = more speed) that's why speed skater wheels are huge, but are way harder to control.



Straight frame:
If all wheel size are the same then all wheels will touch the ground.
Standard frame



Rockable frame:

The front and back wheel of this frame can be adjusted to move up by 2mm to create a rocker setting.

If all wheels are the same size.

Some skate have this setting otherwise your can Taobao it



Toe Wheel Heel Wheel Recommendation is from experience. Flat setting: Center Line Flat Basic setting works for most things Base Line Recommended for urban Rocker setting: Center Line Rocker Balancing on Center 2 wheels ,easier to turn but more unstable. Base Line Recommended for salomers Anti rocker setting: Center Line Anti Rocker Balances on outer 2 wheel. Very stable but harder to turn. **Base Line**

Recommend for sliding

Skate Parts (tools)




Wheel key 0.4 mm

Allen keys come in 2 sizes one for frames bolt and another for wheel axle, this applies to most skates but not all.

02

Replaceable parts

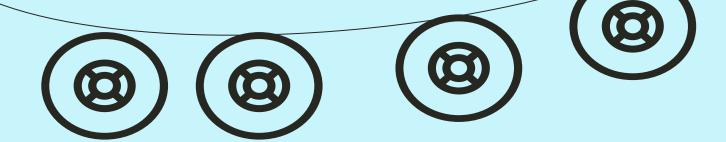

What can be replaced

Everything!



Shops around singapore

- 1. Hvper sport
- 1 Pasir Ris CI, #05-104 Ehub Downtown East, Singapore 519599
- Ernskates @ parkland green
 ECP, Hyper Sport, Singapore 449875
- 3. Freeskate Inline Skate Specialists Shop 338 Ang Mo Kio Ave 1, #01-1649, Singapore 560338
- 4. Flying Eagle Skate Singapore (By Appointment Only)
- 33 Ubi Avenue 3 #08-25 Vertex Tower B, 408868
- 5. INLINEX Store
- 37 Kallang Pudding Road #09-06 Bldg, B, Singapore 349315

Camera scan function

How to use the camera scan



Take a picture of the product you want



Use the keywords above to narrow down the search function



Buckles 轮滑鞋芭扣



标价是一条的价格,带一个扣夹(送三个螺丝,三个螺母)



Bearings 轮滑鞋轴承

正品黑金高速轴承



16个装 送扳手+套筒+润滑油

轴承参数



Skates wheels 轮滑鞋轮子






Light
wheels
/ spark
wheels

轮滑鞋发光轮子

轮滑鞋火石轮子

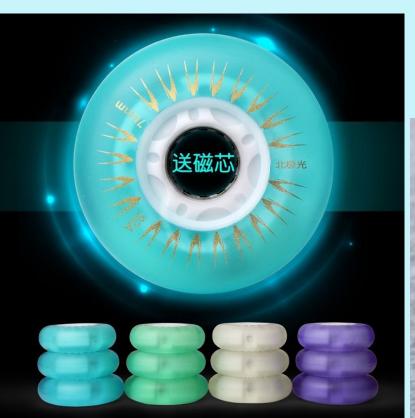



Frame bolt 轮滑鞋底钉

正品米高底钉



四个底钉=16元包邮


00个总领=怨私包邮

轮滑鞋 底钉



carabiner 轮滑鞋提鞋扣



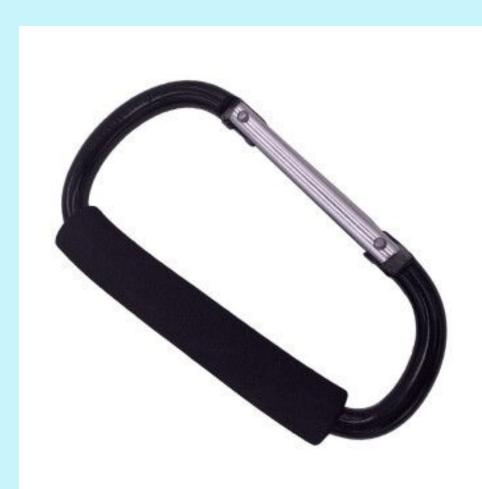

轮滑鞋护具

我们只卖专业护具!





练习轮滑桩





Ice blade converter

轮滑鞋冰刀片







轮滑鞋尺码	轮子直径	冰刀尺码
26-37码(儿童)	62-72mm	小码冰刀
38-45码(成人)	76-80mm	大码冰刀

(不确定尺寸或特殊款鞋 可咨询客服后再下单)

(下单留言备注大小码,默认发大码)

Looking for new skates?

Taobao is an option but do keep in mind that shoe size not equal skate sizes Too small it will hurt to skate Too big the skate will be dangerous to use (no support)

Safest is to go physical shop and try. **DO NOT** let them persuade you if they do not have your size, REJECT them and just wait for stocks.

轮滑鞋

高强度PP鞋壳

流线型注塑鞋壳,坚固耐冲击, 改进版加宽鞋壳,不夹脚,增加脚部舒适感。









Shipping methods

This one means gather at warehouse which after you have to pay another shipping fee

更改 〉 官方集运-空运

跨境运费¥18.00起,运费以集运时为准

查看计费规则 >

官方集运-空运

This is the shipping options

送货上门

自取

□ 支付方式

visa ****3832 >

洵 小沈子轮滑



斯凯汀刹车轮耐磨斯凯丁 夜光轮子闪光轮 ¥8.00 颜色分类:黄光76MM(送轴承和磁芯); x1 发货时间:付款后24小时内

大陆段运费 普通配送

购买数量

快递 免邮 >

订单备注 选填,请先和商家协商一致

官方直邮-海运

查看计费规则 >

跨境运费: ¥30.00

(另需缴纳报关GST)

This one means direct shipping by sea

一次付款,直达新加坡

官方直邮-空运

跨境运费: ¥19.00 This one means direct 查看计费规则 > shipping by air

❷ 一次付款,直达新加坡

官方集运-海运


跨境运费 ¥21.00起,运费以集运时为准

查看计费规则 >

自行联系卖家发货

03

Skate maintenance

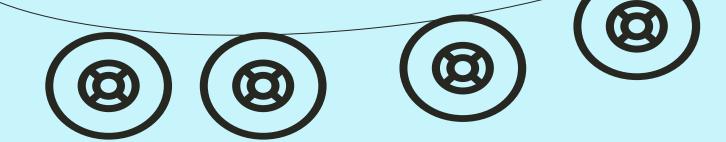

What can be maintained?

- 1. Boots
- 2. Frame
- 3. Bearings

Please use the resources sparingly

Save the earth

Line the area you are going to use with the towel

And clean up any mess quickly

Boots

- 1. Unscrew all the wheels
- 2. Unscrew the frame
- Wipe down all the skate parts with wet tissues
- 4. Even the underneath parts

Frame

- 1. Wipe down the frame
- 2. Dry it
- 3. Apply a THIN layer of grease on the inside (optional)

Bearings

- 1. Put bearing in aluminium tray (hold it down inside
- 2. Prepare the spray (shake it)
- Spray bearing until dirt comes out (no need to spray too long) in short burst
- 4. Apply small amount of grease
- 5. Spin bearings to spread it evenly
- 6. Wipe the outside of bearings

FIX back the skate

- 1. Screw back the frame 1st
- 2. Grease the axle before screwing it back
- 3. Wipe of any excess oil or grease
- 4. CONGRATULATIONS you have maintained your skates.

Q and A

- 1. How do I remove my ...?
 - 2. How to change ...?
 - 3. Any tips on ...?
- 4. Modifications that I want to make?

THANKS!

Please go to the toilet and wash your hands

CREDITS: This presentation template was created by **Slidesgo**, including icons by **Flaticon**, and infographics & images by **Freepik**

Please keep this slide for attribution